

Under the menu for Job Parameters/Restart:

Select the option "Write"

Choose the "Single increment file(s)"

And choose the "Last converged only"

The screenshot displays a software interface for configuring restart data. The 'RESTART DATA MODE' section has three options: 'OFF', 'WRITE', and 'READ & WRITE'. The 'WRITE' option is selected. Below this, the 'WRITE RESTART DATA' section has two options: 'SINGLE INCREMENT FILE(S)' and 'LAST CONVERGED ONLY'. Both are selected. The 'COMPLETION OF UNFINISHED LOADCASE' section has three options: 'UNMODIFIED', 'MODIFIED', and 'IMMEDIATE'. The 'MODIFIED' option is selected. Below this, there are several input fields for parameters like 'TIME STEP (DYNAMIC ANALYSIS)', 'END TIME', '# STEPS', 'REASSEMBLY INTERVAL', '# RECYCLES', 'MAX STEP SIZE', and '% OF TOTAL LOAD'. The 'IMMEDIATE REMESH' section has three options: 'OFF', 'AUTOMATIC', and 'MANUAL (.t18)'. The 'MANUAL (.t18)' option is selected. The 'PREVIOUS POST FILE' section has two options: 'COPY TO CURRENT' and 'NO COPY'. The 'NO COPY' option is selected. The 'CHANGED CONTACT BODIES' and 'LOADED CONTACT BODIES' sections have two options: 'CHANGED CONTACT BODIES' and 'LOADED CONTACT BODIES'. The 'LOADED CONTACT BODIES' option is selected. The interface also includes a 'JOB RESULTS' panel with 'DMIG OUT' selected, a 'DEACTIVATION' panel, an 'INPUT FILE TEXT' panel with 'INCLUDE FILE' selected, an 'ELEMENT TYPES' panel with 'TITLE' selected, a 'CHECK' panel with 'RENUMBER ALL' and 'TABLES' selected, a 'USER DOMAINS' panel, a 'RUN' panel, and a 'COMPLETION OF UNFINISHED LOADCASE' panel. The interface also includes a 'JOB RESULTS' panel with 'DMIG OUT' selected, a 'DEACTIVATION' panel, an 'INPUT FILE TEXT' panel with 'INCLUDE FILE' selected, an 'ELEMENT TYPES' panel with 'TITLE' selected, a 'CHECK' panel with 'RENUMBER ALL' and 'TABLES' selected, a 'USER DOMAINS' panel, a 'RUN' panel, and a 'COMPLETION OF UNFINISHED LOADCASE' panel. The interface also includes a 'JOB RESULTS' panel with 'DMIG OUT' selected, a 'DEACTIVATION' panel, an 'INPUT FILE TEXT' panel with 'INCLUDE FILE' selected, an 'ELEMENT TYPES' panel with 'TITLE' selected, a 'CHECK' panel with 'RENUMBER ALL' and 'TABLES' selected, a 'USER DOMAINS' panel, a 'RUN' panel, and a 'COMPLETION OF UNFINISHED LOADCASE' panel.

```
Command > *colormap 1
Command > *colormap 2
Command > *next_job
Command > *previous_job
Command > *next_job
Command > *update_job
Command > █
```

Ready