 


Under the menu for Job Parameters/Restart:

Select the option "Read & Write"





Use the same configuration as in the parent job



Choose the "Single increment file(s)" consistent with the setting used for the parent job




Select the unfinished parent job

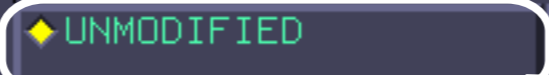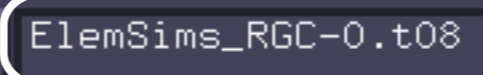

Select the "Unmodified" to keep the simulation configuration of the restart job identical with the parent job

Select "Copy to current" to merge the result file of the parent job into the restart job (single result file)

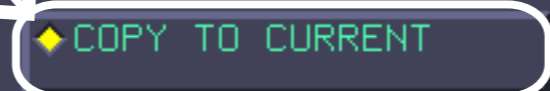

```
Command > *job_option reauto:on
Command > *job_option reauto:off
Command > *job_option reauto:on
Command > *job_option reauto:immediate
Command > *job_option reauto:on
Command > *job_option reauto:off
Command >
```

Ready