

Under the menu for Job Parameters:

STRUCTURAL JOB PROPERTIES

JOB PARAMETERS

MARC INPUT FILE

VERSION ▾ DEFAULT STYLE ▾ TABLE-DRIVEN

■ EXTENDED PRECISION

OUT-OF-CORE ELEMENT STORAGE BLK8Z 40960

OUT-OF-CORE INCREMENTAL BACKUP

STATE STORAGE ◆ ALL POINTS ◇ CENTROID

USER SUBROUTINE USDATA

USER DATA MEMORY ALLOCATION 0

USER SUBROUTINE UFXORD

# SHELL/BEAM LAYERS 5

1

PSHELL TEMPERATURE GRADIENT ID 0

MATRIX SOLVER ▾ ■ RESTART ▾

UNITS AND CONSTANTS

NUMERICAL PREFERENCES

# DYNAMIC MODES 10 MODAL DAMPING

# BUCKLE MODES 2

# POS. BUCKLE MODES 2

CAVITY PARAMETERS

ADVANCED CONNECTION CONTROL

static

static

ANALYSIS OPTIONS

JOB RESULTS

JOB PARAMETERS

ANALYSIS DIMENSION

▾ 3-D

OK

OK

HELP

Click to open the option for restart

```
Command > *job_option reauto:on
Command > *job_option reauto:off
Command > *job_option reauto:on
Command > *job_option reauto:immediate
Command > *job_option reauto:on
Command > *job_option reauto:off
Command >
```

Ready