


Under the menu for Job Parameters/Restart:

Select the "Modified" to change the simulation configuration of the restart job (different from the parent job)

Enter the new simulation parameters

Select "No copy" to keep the result file of the restart job separated from the parent job (single result file)

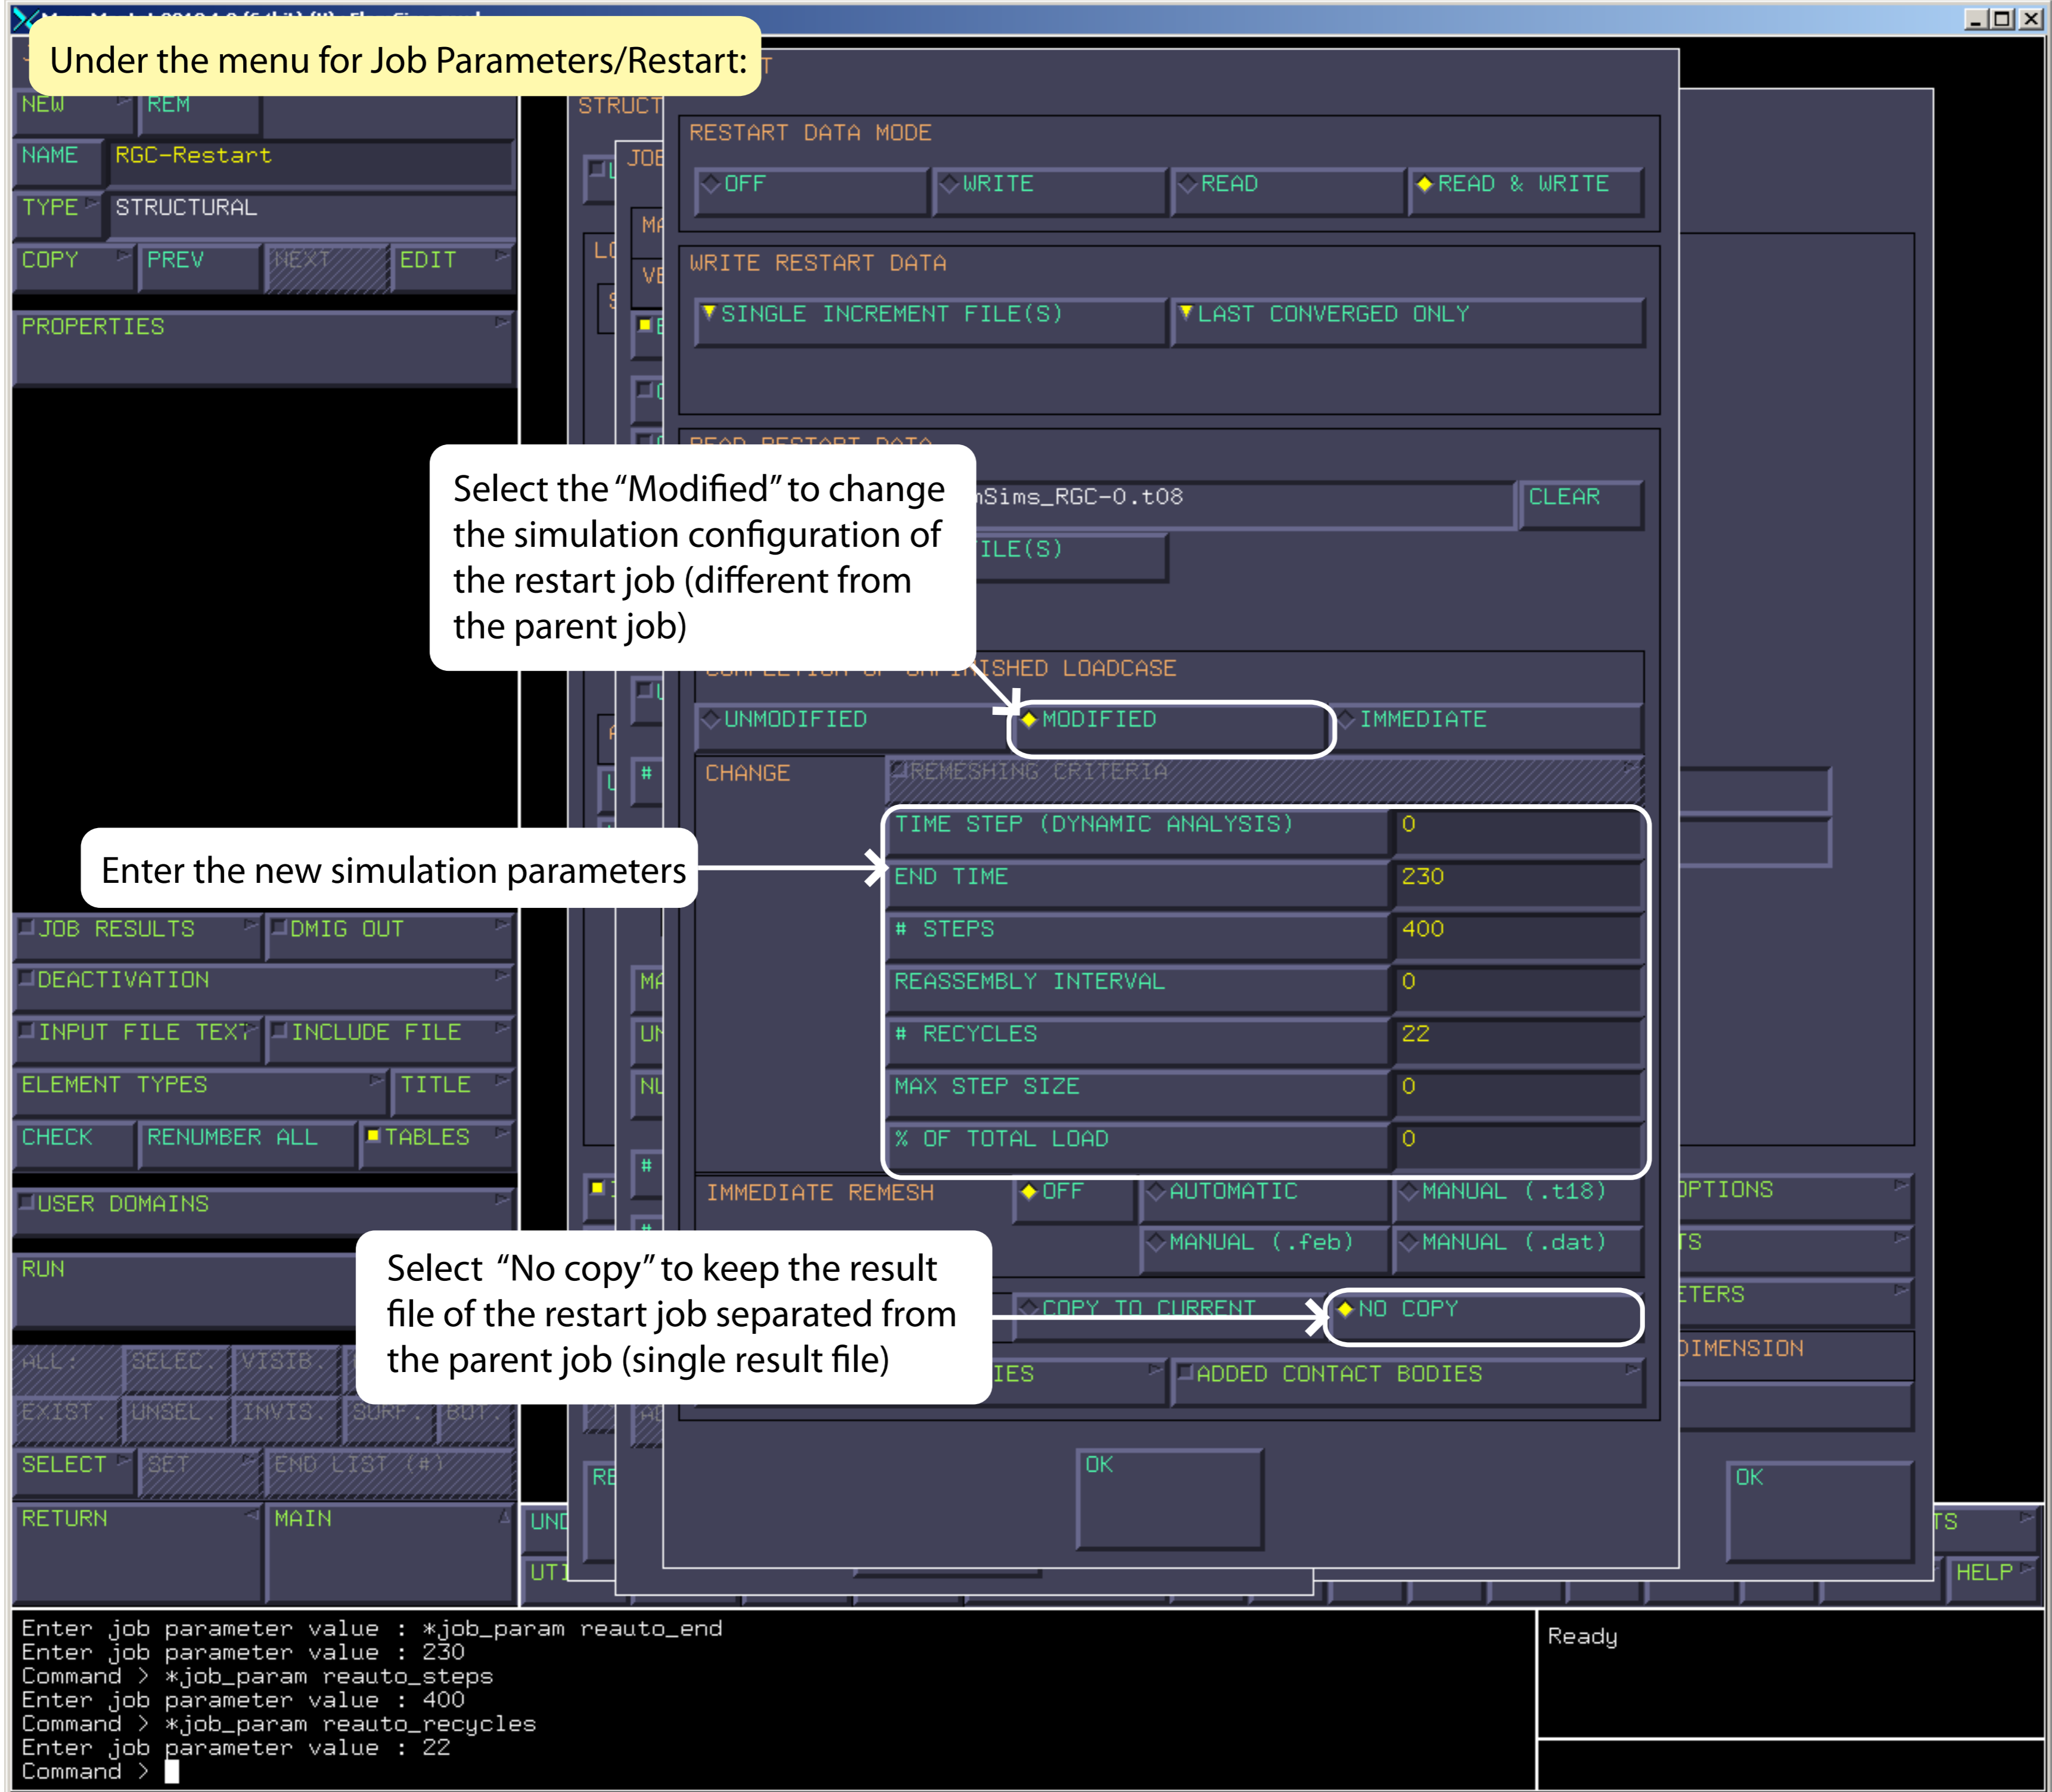

RESTART DATA MODE  
 OFF  WRITE  READ  READ & WRITE

WRITE RESTART DATA  
SINGLE INCREMENT FILE(S) LAST CONVERGED ONLY

READ RESTART DATA  
Sims\_RGC-0.t08 CLEAR

UNMODIFIED  MODIFIED  IMMEDIATE

TIME STEP (DYNAMIC ANALYSIS)	0
END TIME	230
# STEPS	400
REASSEMBLY INTERVAL	0
# RECYCLES	22
MAX STEP SIZE	0
% OF TOTAL LOAD	0

IMMEDIATE REMESH  OFF  AUTOMATIC  MANUAL (.t18)

COPY TO CURRENT  COPY TO CURRENT  NO COPY

```
Enter job parameter value : *job_param reauto_end
Enter job parameter value : 230
Command > *job_param reauto_steps
Enter job parameter value : 400
Command > *job_param reauto_recycles
Enter job parameter value : 22
Command >
```

Ready