

Marc Mentat 2010.1.0 (64bit) (X) : ElemSims.mud

JOBS

NEW REM

NAME RGC-Restart

TYPE STRUCTURAL

COPY PREV NEXT EDIT

PROPERTIES

Fun facts:

- + If the selected loadcase in the restart job is different from the original one, Marc/Mentat will restart the job until the original loadcase is completed.
- + If identical loadcase and boundary condition are selected, Marc/Mentat will add (append) the loadcase and boundary condition into the original ones

MSC Software

STRUCTURAL JOB PROPERTIES

LOADCASES

SELECTED CLEAR

AVAILABLE

UniTensionZ	STRUCTURAL	static
UniCompresZ	STRUCTURAL	static

INITIAL LOADS

INERTIA RELIEF

CONTACT CONTROL

MESH ADAPTIVITY

ACTIVE CRACKS

DESIGN

CYCLIC SYMMETRY

GLOBAL-LOCAL

STEADY STATE ROLLING

MAP TEMPERATURE

ANALYSIS OPTIONS

JOB RESULTS

JOB PARAMETERS

ANALYSIS DIMENSION

3-D

RESET

OK

HELP

Choose a different job name from the original/parent job

When creating a restart job no loadcase(s) or boundary condition(s) needs to be selected

And click to open the option for Job Parameters

Click to open the option for Job Results

JOB RESULTS DMIG OUT

DEACTIVATION

INPUT FILE TEXT INCLUDE FILE

ELEMENT TYPES TITLE

CHECK RENUMBER ALL TABLES

USER DOMAINS

RUN

ALL: SELEC. VISIB. OUTL. TOP

EXIST. UNSEL. INVIS. SURF. BOT.

SELECT SET END LIST (#)

RETURN MAIN

```

Enter add job loadcase : *next_job
Enter add job loadcase : *previous_job
Enter add job loadcase : *previous_job
Enter add job loadcase : *remove_job_loadcases UniCompresZ
Enter remove job loadcase : *new_job *job_class structural
Command > *job_name RGC-Restart
Command >
  
```

Ready