

Under the menu for Job Parameters:

STRUCTURAL JOB PROPERTIES

JOB PARAMETERS

MARC INPUT FILE

VERSION ▼ DEFAULT STYLE ▼ TABLE-DRIVEN

■ EXTENDED PRECISION

OUT-OF-CORE ELEMENT STORAGE BLK8Z 40960

OUT-OF-CORE INCREMENTAL BACKUP

STATE STORAGE ◆ ALL POINTS ◇ CENTROID

USER SUBROUTINE USDATA

USER DATA MEMORY ALLOCATION 0

USER SUBROUTINE UFXORD

# SHELL/BEAM LAYERS 5

1

PSHELL TEMPERATURE GRADIENT ID 0

MATRIX SOLVER ■ RESTART

UNITS AND CONSTANTS

NUMERICAL PREFERENCES

# DYNAMIC MODES 10 MODAL DAMPING

# BUCKLE MODES 2

# POS. BUCKLE MODES 2

CAVITY PARAMETERS

ADVANCED CONNECTION CONTROL

ANALYSIS OPTIONS

JOB RESULTS

JOB PARAMETERS

ANALYSIS DIMENSION

▼ 3-D

OK

OK

HELP

Click to open the option for restart

```
Command > *colormap 1
Command > *colormap 2
Command > *next_job
Command > *previous_job
Command > *next_job
Command > *update_job
Command > █
```

Ready